

Determining your Gateway Identification Number

The Gateway Identification number is a 3-digit code that tells your remotes which frequency to use in order to work with your specific Gateway (Digital Converter Box).

There are three different ways to locate this number:

- **Preferred Method**
Check the inside of the battery cover on your channel 4 remote. (slide cover off and flip over) There may be a label with your 3-digit Gateway ID number.
- **Alternative Method #1**
If there is no label inside the battery cover, the Gateway ID can also be found if you have another remote / TV that is already working.
 - Press and hold **Mute** and **Select** at the same time till the light at the top blinks.
 - Press INFO, then Press B.
 - Count the blinks (1fast blink = 0, Blink = 1, Blink-Blink = 2, ect.). It should pause between each set of numbers. So if it goes 1fast blink,pause, blink,pause, blink-blink the gateway ID would be 0-1-2.
- **Alternative Method #2**
The Gateway ID can also be found through the Gateway itself. Turn on the television that is located the closest to your Gateway box and make sure it is on channel 4. Press the menu button on the Gateway box. Using the channel up and down buttons on the Gateway, select "Remote Control Setup," then press select. Now press the "PPV" button on the remote. The TV should display the remote's current setting as well as the Gateway ID number required for your system.

Entering the Gateway Identification Number

1. Press and hold the Mute and Select keys simultaneously until the LED key becomes solid.
2. Press the B Key.
3. Press the three digits for the Gateway ID.

Entering the source

1. Press and hold Mute and Select keys simultaneously until the LED key becomes solid.
2. Press the A key.
3. Press 0 if gateway is in same room as TV (Channel 4 only)
Press 1 for Ch 4

Press 2 for Ch 8
Press 3 for Ch 13

Programming the T.V. power & volume using specific codes

1. Press and hold the Mute and Select keys simultaneously until the LED key becomes soild.
2. Enter the three digits of the TV CODE.
3. Press Select to lock in the code.

Programming the T.V. power & volume manually

1. Press and hold the Mute and Select keys simultaneously until the LED key becomes soild.
2. Press the up arrow and continue pressing and releasing until the TV turns off.
3. Press Select to lock in the code (if the code is passed, repeat the previous steps only using the down arrow).

Programming the Operating Mode

1. Press and hold the Mute and Select keys simultaneously until the LED key becomes soild.
2. Press the D key.
3. Press 0 to select SCR-200 compatibility or 1 to select SRC-350 native mode.
4. Press Select to lock in the code.

TV Remote Codes SRC-350

AOC

005, 006, 019, 024, 032, 053, 095, 108, 120, 140

Admiral

003, 018, 041, 063, 084, 087, 125, 129, 146, 147, 187, 194, 210, 211, 254, 405

Aiko

024

Aiwa

179, 194, 214, 251, 471

Akai

000, 005, 006, 027, 032, 070, 072, 075, 107, 108, 120, 131, 135, 139, 149, 150, 269, 281,

462

Alaron

187

Amark

032, 098, 120, 144, 215, 219, 224, 244, 281

Amstrad

033, 157

Anam

005, 009, 021, 032, 041, 120, 121, 183, 217, 221, 223, 269, 281

Archer

032, 120, 281

Audiovox

024, 032, 041, 120, 121, 130, 154, 250, 465

Audio Dynamics

238

BPL

098, 144

Bell & Howell

018, 146, 194, 211, 405

Broksonic

005, 010, 027, 037, 107, 167, 174, 176, 225, 226, 245, 269

CXC

041

Candle

005, 006, 022, 025, 091

Capehart

019

Carver

010, 027

Centurion

206, 380, 269, 005, 006, 194, 095, 107

Citizen

005, 006, 010, 016, 018, 022, 024, 025, 027, 098, 202, 224, 068, 091, 211

Concerto

005, 010, 027, 095, 269, 107

Contec

017, 041, 054, 181, 185, 227

Corando

098, 224, 244, 144, 219, 227

Craig

021, 041, 223

Crown

041, 098, 224, 244, 144, 219

Curtis-Mathes

005, 006, 010, 016, 018, 027, 059, 098, 125, 131, 194, 202, 210, 224, 231, 251, 107, 108, 211, 144, 244, 003, 087

CXC

041

Capehart

019

Carver

010, 027, 107

Coronado/Coranado

098, 224, 144

Daewoo

005, 010, 024, 027, 029, 030, 032, 098, 120, 130, 214, 215, 224, 247, 250, 252, 158, 196, 095, 197, 202, 204, 205, 206, 207, 209, 194, 165, 007, 033, 281, 269, 144, 107

Daytron

006, 024, 098, 194, 224, 144, 027, 095, 107, 108, 005, 269

DBX

238

Denon

052

Dimensia

125

Dixi

010, 027, 032, 120

Dumont

001, 005, 269, 249

Electrohome

072, 098, 149, 224, 240, 095 ,005 ,269, 144

Emerson

004, 005, 017, 033, 035, 037, 038, 039, 041, 054, 098, 130, 132, 141, 143, 176, 181, 185, 187, 194, 222, 223, 224, 225, 226, 227, 251, 252, 253 203, 222, 223, 224, 225, 226, 227, 251, 252, 263, 167, 144, 244, 006, 167, 103, 158, 169, 392, 400, 401, 408, 269, 219, 250

Envision

006, 095, 005, 269

ESA

454, 456

DBX

238

Denon

052, 266

Dimensia

125, 147, 063

Dixi

010, 027, 032, 120, 281, 107

Fisher

042, 099, 194, 217

Funai

024, 051, 132, 187, 251, 157, 211, 179, 223, 146, 187, 460, 469

Fujitsu

187, 460, 469

Funai

024, 041, 132, 187, 251

Futuretech

041

Gateway

156

GE

003, 005, 008, 009, 043, 087, 125, 130, 143, 147, 165, 182, 183, 206, 210, 211, 228, 231, 233, 248 095 015, 101, 018, 042, 090, 406, 407, 183, 146, 001, 249, 063, 084, 194, 269, 406, 250

Gibraltar

090, 095, 107, 108, 233, 360, 224, 223, 006, 206, 005, 269, 144, 131

Goldstar

005, 006, 010, 027, 045, 098, 168, 194, 223, 224, 230, 238, 090, 107, 108, 233, 360, 224, 206, 269, 144, 131

Gradiente

057, 060, 397

Grundig

233

GO-Video

443

Granada

010, 027, 107

Hall Mark

005 , 095, 269

Hitachi

005, 017, 018, 024, 048, 049, 050, 051, 052, 053, 054, 055, 098, 116, 123, 142, 160, 185, 224, 206, 266, 269, 405, 144, 219

Hyundai

231, 251, 095, 098, 244, 453

Harman Kardon

238

Hinari

005, 017, 018, 024, 048, 049, 050, 051, 052, 053, 054, 055, 098, 116, 126, 142, 160, 185, 224, 231, 251

Inkel

364

Insignia

150, 461, 456

Infinity

010, 027

JBL

010, 027

JC Penney

003, 005, 006, 014, 016, 043, 072, 087, 096, 098, 125, 131, 149, 165, 194, 202, 206, 210,

223, 224, 231, 238, 242, 095

JVC

057, 059, 060, 234, 235, 238, 397, 410, 008, 165

Jensen

056, 062

Kawasho

061, 095, 005, 269

KMC

098, 224, 144

Konka

236, 445, 041

KTV

005, 006, 039, 041, 098, 224, 233, 269, 244, 144, 219

Kurazai

211, 018, 405, 146

KEC

041

KMC

098, 224

Kawasho

061

Kenwood

006, 235, 251

Kloss

022, 110, 175, 380

Konka

236, 445, 041

LXI

003, 005, 010, 027, 087, 125, 129, 131, 132, 194, 223, 251, 024, 157, 254, 269, 108, 107, 084, 147, 063

Lloytron

098, 224, 144

Lodgenet

018, 211, 405, 146

Loewe

010, 027, 107

Logik

018 211, 405, 146

Luxman

005, 095, 206, 269

MGA

005, 006, 071, 072, 149, 187, 194, 240, 09, 095, 384, 394, 107, 108, 109, 110, 07, 206, 017, 054, 185, 269, 189, 131

MTC

005, 006, 010, 016, 024, 027, 202, 251, 269, 107

Magnasonic

010, 024, 027, 129, 131, 187, 107, 108, 254

Magnavox

000, 005, 006, 008, 010, 017, 024, 025, 027, 054, 067, 068, 098, 110, 132, 154, 167, 175, 187, 194, 216, 224, 231, 237, 251, 254, 090, 091, 404, 397, 419, 057, 060, 206, 075, 472, 269, 144, 107, 150, 185, 129, 194, 216, 224, 231, 237

Majestic

018

Marantz

005, 006, 010, 027, 068, 072, 149, 237, 238, 107, 108, 109, 269, 189, 131

Marta

223

Matsui

010, 027, 032, 109, 120, 281, 189, 107

Memorex

005, 018, 032, 072, 120, 149, 187, 194, 219, 223, 242, 244, 248, 251, 090, 211, 405, 101, 245, 281, 269, 405, 218, 146

Midland

001, 003, 087, 165, 084, 249

Mitsubishi

005, 006, 017, 054, 070, 071, 072, 123, 129, 149, 187, 194, 239, 240, 017, 054, 070, 123, 239, 090, 095, 384, 394, 107, 108, 149, 269, 189, 131, 027, 185, 109, 110, 206, 187, 158

Multitech

041, 251

NAD

002, 005, 131, 166, 269, 108

NEC

005, 006, 007, 183, 191, 194, 090, 108, 129, 206, 254, 269, 131

National

008, 010, 011, 012, 027, 146, 190, 211, 241, 107

Nikkai

010, 027, 113, 131, 108, 107

Onwa

041

Optimus

012, 166, 194, 242

Optonica

129

Orion

010, 027, 037, 176, 212, 225, 226, 019, 160, 161, 163, 382, 033, 216, 107

Osume

017, 054, 185

Panasonic

008, 009, 010, 011, 012, 127, 148, 165, 177, 183, 211, 218, 231, 241, 242, 042, 429, 146

Philco

005, 006, 010, 024, 025, 027, 052, 067, 068, 072, 098, 110, 149, 175, 176, 183, 216, 224, 237, 251, 091, 206, 075, 244

Philips (Magnavox)

000, 005, 006, 010, 025, 027, 068, 098, 136, 137, 138, 150, 220, 216, 223, 224, 237, 251, 254, 136, 137, 137, 150, 220, 223, 206, 228, 075, 397, 090, 404, 091, 419, 472, 269, 144, 107, 150, 185, 129

Pioneer

002, 008, 048, 051, 076, 131, 166, 235, 111, 393, 108

Portland

005, 024, 098, 224, 206, 244, 269, 144, 219

Proscan

005, 125, 147, 152, 210, 233, 147, 070, 269, 063

Proton

005, 006, 013, 019, 098, 224, 013, 090, 371, 269

Pulsar

001, 024, 248, 048, 005, 269

Quasar

008, 009, 012, 165, 183, 211, 231, 242, 241, 218, 146

RCA

003, 005, 008, 014, 048, 063, 072, 078, 079, 080, 082, 084, 085, 086, 087, 125, 130, 147, 149, 160, 182, 183, 210, 231, 233, 251, 254, 006, 206, 042, 266, 070, 416, 269, 250, 160, 182, 183, 210, 231

Radio Shack

003, 005, 041, 072, 084, 087, 098, 141, 144, 149, 194, 218, 224, 230, 242, 251, 269

Realistic

005, 006, 035, 041, 098, 141, 144, 194, 222, 223, 224, 251, 269

Runco

001, 006, 243, 249

SAA

145

SSS

005, 041

Saba

051, 116, 142

Saisho

032, 033, 109, 120

Sampo

006, 019, 090, 108, 131, 156, 194

Samsung

005, 006, 010, 015, 016, 017, 027, 032, 054, 090, 098, 107, 108, 120, 131, 144, 151, 153, 155, 157, 167, 181, 185, 194, 202, 219, 221, 224, 229, 244, 246, 247, 269, 281, 386, 411

Sansui

176, 225, 235, 245, 251, 424

Sanyo

042, 089, 092, 109, 135, 184, 189, 194, 217, 219, 244

Scott

005, 006, 037, 041, 090, 093, 098, 108, 131, 144, 187, 194, 224, 247, 269

Sears

003, 005, 010, 016, 027, 038, 042, 063, 084, 087, 096, 098, 099, 101, 102, 104, 107, 108, 125, 131, 132, 144, 147, 155, 184, 187, 194, 202, 206, 217, 219, 223, 224, 229, 244, 251, 269

Sharp

017, 024, 025, 054, 098, 129, 141, 144, 200, 224, 244, 254, 393, 409

Signature 2000

010, 018, 027, 107, 108, 129, 131, 146, 219, 211, 224, 244, 251, 254, 405

Sony

000, 109, 178, 180, 189, 191, 232

Soundesign

005, 025, 041, 091, 187, 251, 269

Spectricon

032, 120, 281

Starlite

041

Supra

005, 022

Sylvania

005, 006, 010, 024, 025, 027, 067, 068, 075, 090, 091, 098, 107, 108, 110, 131, 132, 144, 150, 157, 158, 175, 194, 206, 224, 228, 237, 240, 251, 269, 419

Symphonic

132, 144, 157, 179, 251

TIVO

136, 137, 138

TMK

005, 090, 206, 269

Tandy

098, 113, 129, 224, 251

Tatung

009, 010, 027, 107, 146 183, 211, 446

Teac

251

Technics

008, 012, 165, 242

Techwood

005, 165, 206, 269

Teknika

005, 010, 016, 018, 022, 024, 025, 027, 041, 072, 075, 091, 098, 107, 114, 144, 149, 150, 187, 202, 206, 219, 223, 224, 244, 251, 269, 380, 405

Telerent

018, 098, 144, 219, 224, 244, 405

Thomson

051, 116, 142

Toshiba

016, 017, 038, 054, 096, 108, 131, 155, 185, 194, 202, 229, 240, 245, 247

Totevision

098, 144, 223, 224, 233

Universal

043, 206

Vector Research

006, 238

Victor

057, 060, 235, 397

Video Concepts

070, 238, 251

Vidtech

005

Viking

022, 380

Wards

000, 005, 006, 010, 018, 027, 043, 063, 067, 068, 090, 107, 125, 141, 147, 182, 187, 194, 206, 224, 251, 269, 405

Westinghouse

037, 041, 130, 146, 176, 194, 211, 250, 408, 449, 458

Yamaha

005, 006, 206, 238, 251

YORX

006, 194

Zenith

001, 018, 024, 154, 178, 179, 223, 225, 235, 248, 249, 251, 405, 406

Zonda

032, 120, 281